


RELATIVE HUMIDITY TABLES

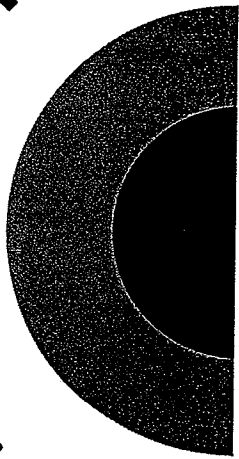

FOR USE WITH *Taylor* HYGROMETERS

Taylor[®]
ENVIRONMENTAL INSTRUMENTS
280 Carr Creek Road
P.O. Box 1345, Fletcher, N.C. 28722
Tel: 704-684-5178
FAX: 704-687-1028
A FINE INTERNATIONAL COMPANY

FOREWORD

THESE RELATIVE HUMIDITY TABLES are computed for a barometric pressure of 29.00 in-Hg. At lower barometric pressures (higher altitudes) the true relative humidity will be slightly greater than that indicated by these tables. At 25.00 in-Hg and 70°F. dry-bulb, this difference is 1% at 80% relative humidity and 4% at 20% relative humidity. At 100°F., this difference is less than 1% at 80% RH and is 2% at 20% RH; At 40°F., this difference is 1% at 80% RH and is 6% at 20% RH.

It is cautioned that values above 140°F. dry-bulb are obtained from curves which were extrapolated by the National Bureau of Standards from the Weather Bureau data at temperatures below 140°F. Extrapolated values cannot be considered as being absolutely correct.

HOW TO USE THE TABLES

Pages 6 and 7 are arranged for dry-bulb temperature and wet-bulb thermometer depression. The balance of the pages are arranged for humidity values to be taken directly from wet-bulb and dry-bulb temperatures without first determining the depression.

Locate in margin the reading corresponding to the dry-bulb indication. Locate in other margin the reading corresponding to the wet-bulb column. The relative humidity is read at the intersection of these two columns. For example—given dry-bulb temperature 144°F. and wet-bulb temperature 112°F., relative humidity is 37%.

IMPORTANT DIRECTIONS FOR HYGROMETERS

Care should be taken to keep the wick clean and supplied with water. Distilled water is preferable. Soluble salts and dirt particles accumulated on the wick adversely affect the rate of evaporation and capillarity, causing inaccuracies in the wet-bulb readings. Wash the wicks frequently; discard and replace when the material becomes hard. Additional wicks can be purchased in lots of one dozen.

For Accurate Readings with Stationary Hygrometer—Accuracy with fixed-position hygrometers, such as the Mason's Form, can be

Complete tables may be ordered from:
National Technical Information Service
Department of Commerce
Springfield, VA 22161

Order publication number PB257-023/2. All orders prepaid: \$11.95 (1986 price) plus \$3.00 shipping/handling.

obtained only by creating rapid circulation around the bulbs. When taking observations, fan the air vigorously around the instrument with hand fan or similar device for a full-minute or more, then immediately take the readings. . . . first, the wet-bulb; then, the dry-bulb.

For Readings Below the Freezing Point—At temperatures below freezing, the capillarity effect of the wicking is lost. Remove wick from thermometer and apply water directly and sparingly to bare bulb. A thin coat of ice will then be formed on the bulb and evaporation from the frozen surface will go on as before. Accurate results can be expected only with finely graduated thermometers; and the lower the temperature, the more critical is this requirement.

HOW TO USE THE SLING PSYCHROMETER

First, remove the instrument from the protecting case. Saturate the wicking, covering the bulb, with water at room temperature, then whirl the instrument for 15 or 20 seconds, holding it away from the body. Stop and read the wet-bulb thermometer; then repeat the whirling operation until two or more wet-bulb readings agree at the lowest indication obtainable. The wicking must be kept perfectly clean and thoroughly saturated to secure accurate indication. See paragraph "Important Directions."

DRY BULB TEMPERATURE OF

54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	128	129	130																							
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100

WET BULB TEMPERATURE °F

WET BULB TEMPERATURE °F

DRY BULB TEMPERATURE OF

91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	128	129	130																																																												
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100

DRY BULB TEMPERATURE OF

132	134	136	138	140	142	144	146	148	150	152	154	156	158	160	162	164	166	168	170	172	174	176	178	180	182	184	186	188	190	192	194	196	200	202	204	206	208	210	212	
70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110
110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143	144	145	146	147	148	149	150
150	151	152	153	154	155	156	157	158	159	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190
190	191	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223	224	225	226	227	228	229	230

WET BULB TEMPERATURE °F

WET BULB TEMPERATURE °F

DRY BULB TEMPERATURE OF



DRY BULB TEMPERATURE °F

Large table with columns for DRY BULB TEMPERATURE °F (1-17) and DEPRESSION (Dry Bulb Temperature) (1-17). The table contains numerical data for various temperature and depression values.



DEPRESSION (Dry Bulb Temperature) (Dry Bulb Temperature minus Wet Bulb Temperature)

DRY BULB TEMPERATURE °F

DRY BULB TEMPERATURE °C

Table with 100 columns and 100 rows containing numerical data for DRY BULB TEMPERATURE °C. The columns are labeled from -20.0 to 20.0 in increments of 0.5. The rows are labeled from 0.1 to 7.5 in increments of 0.1.

DRY BULB TEMPERATURE °C

Table with 100 columns and 100 rows containing numerical data for DRY BULB TEMPERATURE °C. The columns are labeled from -20.0 to 20.0 in increments of 0.5. The rows are labeled from 0.1 to 7.5 in increments of 0.1.

DRY BULB TEMPERATURE °C

2.5	3.0	3.5	4.0	4.5	5.0	5.5	6.0	6.5	7.0	7.5	8.0	8.5	9.0	9.5	10.0	10.5	11.0	11.5	12.0	12.5	13.0	13.5	14.0	14.5	15.0	15.5	16.0	16.5	17.0	17.5	18.0	18.5	19.0	19.5	20.0	20.5	21.0	21.5	22.0	22.5	23.0	23.5	24.0	24.5	25.0	25.5	26.0	26.5	27.0	27.5	28.0	28.5	29.0	29.5	30.0
2.5	3.0	3.5	4.0	4.5	5.0	5.5	6.0	6.5	7.0	7.5	8.0	8.5	9.0	9.5	10.0	10.5	11.0	11.5	12.0	12.5	13.0	13.5	14.0	14.5	15.0	15.5	16.0	16.5	17.0	17.5	18.0	18.5	19.0	19.5	20.0	20.5	21.0	21.5	22.0	22.5	23.0	23.5	24.0	24.5	25.0	25.5	26.0	26.5	27.0	27.5	28.0	28.5	29.0	29.5	30.0

WET BULB TEMPERATURE °C

2.5	3.0	3.5	4.0	4.5	5.0	5.5	6.0	6.5	7.0	7.5	8.0	8.5	9.0	9.5	10.0	10.5	11.0	11.5	12.0	12.5	13.0	13.5	14.0	14.5	15.0	15.5	16.0	16.5	17.0	17.5	18.0	18.5	19.0	19.5	20.0	20.5	21.0	21.5	22.0	22.5	23.0	23.5	24.0	24.5	25.0	25.5	26.0	26.5	27.0	27.5	28.0	28.5	29.0	29.5	30.0
2.5	3.0	3.5	4.0	4.5	5.0	5.5	6.0	6.5	7.0	7.5	8.0	8.5	9.0	9.5	10.0	10.5	11.0	11.5	12.0	12.5	13.0	13.5	14.0	14.5	15.0	15.5	16.0	16.5	17.0	17.5	18.0	18.5	19.0	19.5	20.0	20.5	21.0	21.5	22.0	22.5	23.0	23.5	24.0	24.5	25.0	25.5	26.0	26.5	27.0	27.5	28.0	28.5	29.0	29.5	30.0

DRY BULB TEMPERATURE °C

2.5	3.0	3.5	4.0	4.5	5.0	5.5	6.0	6.5	7.0	7.5	8.0	8.5	9.0	9.5	10.0	10.5	11.0	11.5	12.0	12.5	13.0	13.5	14.0	14.5	15.0	15.5	16.0	16.5	17.0	17.5	18.0	18.5	19.0	19.5	20.0	20.5	21.0	21.5	22.0	22.5	23.0	23.5	24.0	24.5	25.0	25.5	26.0	26.5	27.0	27.5	28.0	28.5	29.0	29.5	30.0
2.5	3.0	3.5	4.0	4.5	5.0	5.5	6.0	6.5	7.0	7.5	8.0	8.5	9.0	9.5	10.0	10.5	11.0	11.5	12.0	12.5	13.0	13.5	14.0	14.5	15.0	15.5	16.0	16.5	17.0	17.5	18.0	18.5	19.0	19.5	20.0	20.5	21.0	21.5	22.0	22.5	23.0	23.5	24.0	24.5	25.0	25.5	26.0	26.5	27.0	27.5	28.0	28.5	29.0	29.5	30.0

WET BULB TEMPERATURE °C

DRY BULB TEMPERATURE °C

11.0	11.5	12.0	12.5	13.0	13.5	14.0	14.5	15.0	15.5	16.0	16.5	17.0	17.5	18.0	18.5	19.0	19.5	20.0	20.5	21.0	21.5	22.0	22.5	23.0	23.5	24.0	24.5	25.0	25.5	26.0	26.5	27.0	27.5	28.0	28.5	29.0	29.5	30.0	30.5	31.0	31.5	32.0	32.5	33.0	33.5	34.0	34.5	35.0	35.5	36.0	36.5	37.0	37.5	38.0	38.5	39.0	39.5	40.0	40.5	41.0	41.5	42.0	42.5	43.0	43.5	44.0	44.5	45.0	45.5	46.0	46.5	47.0	47.5	48.0	48.5	49.0	49.5	50.0	50.5	51.0	51.5	52.0	52.5	53.0															
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
11.0	11.5	12.0	12.5	13.0	13.5	14.0	14.5	15.0	15.5	16.0	16.5	17.0	17.5	18.0	18.5	19.0	19.5	20.0	20.5	21.0	21.5	22.0	22.5	23.0	23.5	24.0	24.5	25.0	25.5	26.0	26.5	27.0	27.5	28.0	28.5	29.0	29.5	30.0	30.5	31.0	31.5	32.0	32.5	33.0	33.5	34.0	34.5	35.0	35.5	36.0	36.5	37.0	37.5	38.0	38.5	39.0	39.5	40.0	40.5	41.0	41.5	42.0	42.5	43.0	43.5	44.0	44.5	45.0	45.5	46.0	46.5	47.0	47.5	48.0	48.5	49.0	49.5	50.0	50.5	51.0	51.5	52.0	52.5	53.0															
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100

WET BULB TEMPERATURE °C

DRY BULB TEMPERATURE °C

11.0	11.5	12.0	12.5	13.0	13.5	14.0	14.5	15.0	15.5	16.0	16.5	17.0	17.5	18.0	18.5	19.0	19.5	20.0	20.5	21.0	21.5	22.0	22.5	23.0	23.5	24.0	24.5	25.0	25.5	26.0	26.5	27.0	27.5	28.0	28.5	29.0	29.5	30.0	30.5	31.0	31.5	32.0	32.5	33.0	33.5	34.0	34.5	35.0	35.5	36.0	36.5	37.0	37.5	38.0	38.5	39.0	39.5	40.0	40.5	41.0	41.5	42.0	42.5	43.0	43.5	44.0	44.5	45.0	45.5	46.0	46.5	47.0	47.5	48.0	48.5	49.0	49.5	50.0	50.5	51.0	51.5	52.0	52.5	53.0															
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
11.0	11.5	12.0	12.5	13.0	13.5	14.0	14.5	15.0	15.5	16.0	16.5	17.0	17.5	18.0	18.5	19.0	19.5	20.0	20.5	21.0	21.5	22.0	22.5	23.0	23.5	24.0	24.5	25.0	25.5	26.0	26.5	27.0	27.5	28.0	28.5	29.0	29.5	30.0	30.5	31.0	31.5	32.0	32.5	33.0	33.5	34.0	34.5	35.0	35.5	36.0	36.5	37.0	37.5	38.0	38.5	39.0	39.5	40.0	40.5	41.0	41.5	42.0	42.5	43.0	43.5	44.0	44.5	45.0	45.5	46.0	46.5	47.0	47.5	48.0	48.5	49.0	49.5	50.0	50.5	51.0	51.5	52.0	52.5	53.0															
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100

WET BULB TEMPERATURE °C

DRY BULB TEMPERATURE °C

Psychrometric chart grid showing wet bulb temperature (°C) on the vertical axis and dry bulb temperature (°C) on the horizontal axis. The grid spans from 14.0 to 34.0 on the vertical axis and 10.0 to 40.0 on the horizontal axis.

WET BULB TEMPERATURE °C

DRY BULB TEMPERATURE °C